

Explosive View

No.	Parts	No.	Parts
1	Steering wheel	31	Safety belt
2	Directional intermediate bar	32	Rear brake
3	Directional column axis (up)	33	Rear wheel
4	Cardan joint	34	Rear hub
5	Directional column axis (down)	35	Brake Disc
6	Steering kunckle (left)	36	Flange
7	Steering kunckle (right)	37	Grease seal
8	Drag link	38	Bearing
9	Front hub	39	Rear axle shaft
10	Front wheel	40	Chain plate
11	Connecting base	41	Chain
12	Accelerator pedal	42	Joint lever (left)
13	Brake pedal	43	Joint lever (right)
14	The power switch	44	Backrest
15	Frame	45	Backrest support
16	Gear switch	46	Front plastic cover
17	Meter	47	Pedal plate
18	Rear frame	48	Stop hand shank
19	Rear plastic cover	49	Stop lamo switch
20	Seat	50	Seat lock cable
21	Seat support	51	Sponge
22	Controller	52	Power switch
23	Line cover		
24	Speed switch		
25	Charger port		
26	Brake line		
27	Battery		
28	Battery box		
29	Motor		
30	Chain cover		

